


KAYO MOTO

AT125-2

Assembly Manual



WWW.KAYOMOTO.COM

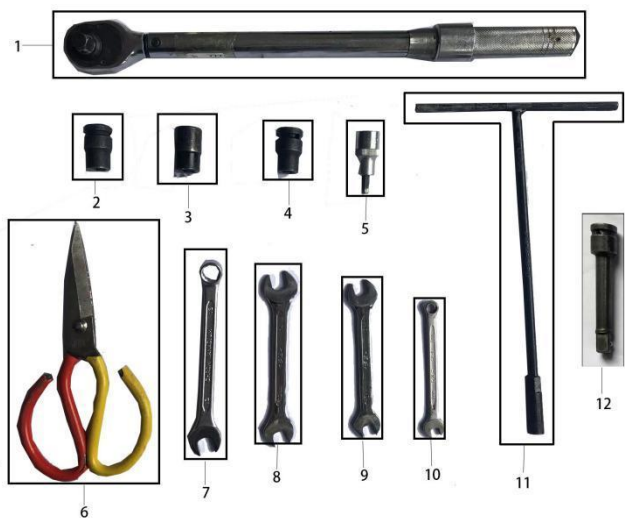

1. The picture on the left shows the tools required for unpacking & assembling the vehicle as below

- ① Torque wrench
- ② 14mm socket
- ③ 13mm socket
- ④ 12mm socket
- ⑤ 6mm hexagon socket
- ⑥ Scissors
- ⑦ No. 13 wrench
- ⑧ No. 12-14 wrench
- ⑨ No. 10-12 wrench
- ⑩ No. 8 wrench
- ⑪ No. 8 T-sleeve
- ⑫ Socket extension rod




2. Remove the straps and cardboard cover.



3. Take out the parts attached on the vehicle and the packaging iron frame, remove the iron frame screws, wait for subsequent installation.



4. The parts shown above need to be subsequently installed on the vehicle.

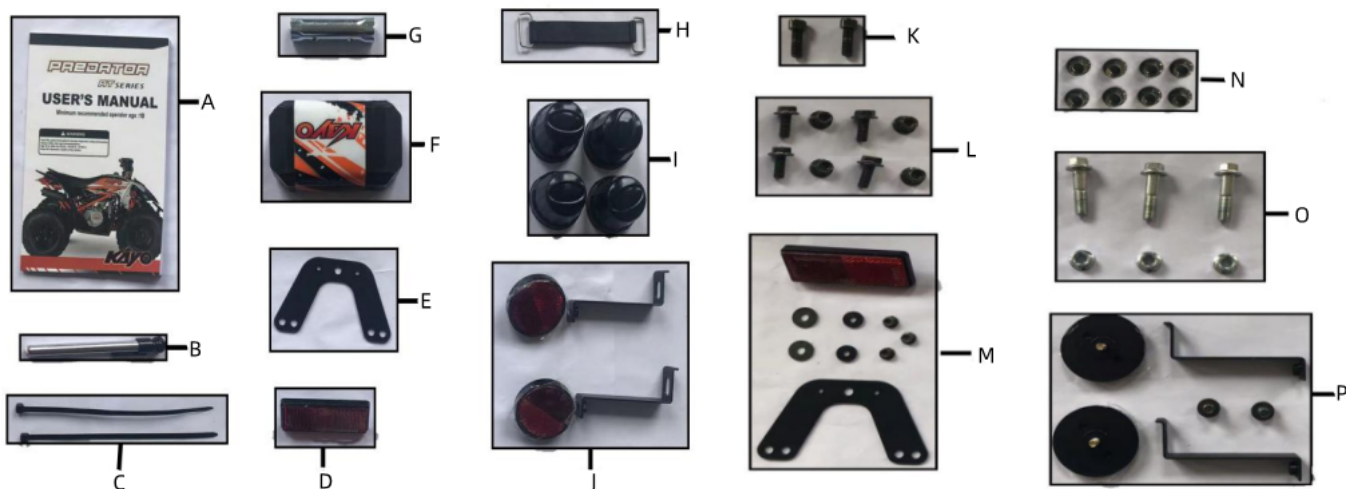

5. The picture above shows the parts in the accessory box. Please read the instruction manual (A) carefully before assembling and install these parts according to the operation steps.

	Name	Quantity
A	User's manual	1
B	Air pressure gauge	1
C	Cable tie	2
D	Rear reflector	1
E	Rear reflector mounting plate	1
F	Padding	1
G	Spark plug socket	1
H	Battery strap	1
I	Dust cover	4
J	Rear right/left reflectors	2
	Bracket	2
K	Bolt	2
L	Bolt	4
	Nut	4
M	Nut	3
	Washer	2
	Washer	2
N	Nut	8
O	Bolt	3
	Nut	3
P	Bolt	2



6. Use tool ① ⑤ to lock the handlebar upper clamps, the distance between the two ends of the mark is close, tighten evenly, first start by hand tightening all four clamp bolts.
 Note: Torque requirement 25-30N.m



7. Use tool ①②⑦ to tighten the rear shock absorber bolt & nut(O).
Note: Torque requirement 49-59N.m



8. Use tool ⑧⑨ to remove the fixing bolts of the iron frame and the rear axle.



9. Use tool ⑩ to tighten the nuts and washers (M) for rear reflector(D) and taillight.



10. Use tool ①④⑫ to install the bracket(J) and tighten the bolts(P) first, then install the right/left reflectors.
Note: Torque requirement 25-30N.m



11. Put the vehicle on the stand for easy installation of other accessories.



12. Use tool ①②⑦⑫ to tighten the bolts and nuts(O) for front right/left shock absorber.
Note: Torque requirement 49-59N.m



13. Use tool ①④⑧⑫ to tighten bolts and nuts(L) for the front guard.
Note: Torque requirement 25-30N.m



14. Please refer to user's manual (A) for air pressure requirements. Use compressed air to inflate the tires, and use the air pressure gauge (B) to inflate to the standard value of 5psi.



15. Install the front wheel on the front hub, use tool ①② to tighten the nut(N).
Note: Torque requirement 25-30N.m



16. Insert the dust cover(I) into the positions shown above.



17. Take out the battery, according to the user's manual (A), first tear off the seal on the battery, add electrolyte, then install the battery cover and wait for the subsequent installation into the battery box.



18. Pull the latch as above shown and remove the seat cushion, waiting for the subsequent installation of the battery.



19. Install the battery and fix it with H. Connect the positive and negative poles as shown above, use tool ⑪ to tighten the bolts and re-install the seat.
Note: red is positive, black is negative.



20. Rotate the petcock to the direction of the arrow as shown above.



21. Unscrew the fuel cap, add gasoline, and tighten the fuel cap clockwise.



22. Please read the user's manual(A) completely and carefully before riding to better understand the performance of the vehicle.

